Tube Fabricating Equipment

Parker PT Inspection Gauges


PT Combination Gauge

Using this unique Parker combination gauge together with the tube marker will guarantee precise and accurate tubing connections.

Use the No Go gap gauge to ensure that correct turns from finger tight have been achieved.

How to Use

Insert the gauge lip under the nut - the tube mark should be in line with the polished line on the tubing made by a marker. This proves that the tubing has remained fully bottomed through the installation process.

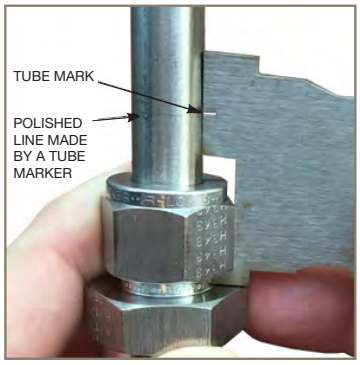


Correct verification of tube bottoming.

How to Order

The correct part number is easily derived from the following number sequence.
The three product characteristics required are coded as shown below.

PT	CG	4T
Series	Type	Size
PT	Combination Gauge	**4T** 1/4” **6T** 3/8” **8T** 1/2” **10T** 5/8” **12T** 3/4” **16T** 1” **6M** 6 mm **8M** 8 mm **10M** 10 mm **12M** 12 mm **16M** 16mm **18M** 18mm **20M** 20mm **22M** 22mm **25M** 25mm

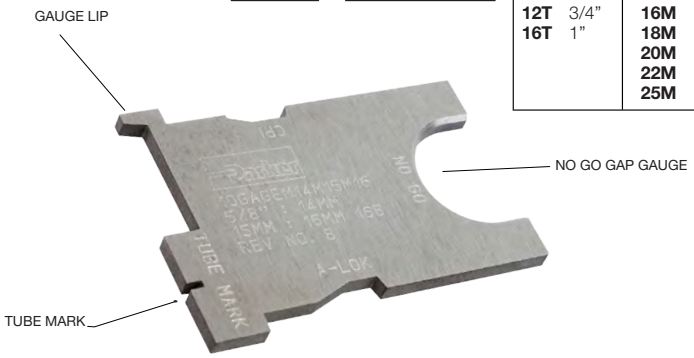

PT Gap Gauge

This compact C-Ring gap gauge is for imperial and metric sizes. It effectively checks the gap dimensions for correct initial make-up. All sizes can be combined on a key ring for easy handling.



How to Order

The correct part number is easily derived from the following number sequence.
The three product characteristics required are coded as shown below.

PT	GG	4
Series	Type	Size
PT	Gap Gauge	**4** 1/4” & 6MM **6** 3/8” **M10** 10MM **8** 1/2” & 12MM **12** 3/4” & 18MM **16** 1” & 25MM

Tel: +45 63 12 83 00 | Email: ps@hymatik.com | www.hymatik.com | Hvidkaervej 27a, DK-5250 Odense SV, Denmark